

INFLATABLES




Installation

Setting It Up



The INFLATABLE has five parts– the unit, blower(s), extension cord(s), tarp, and anchors. Select an area....

...For the INFLATABLE, unroll it flat on the ground, using the fabric positioning loops.

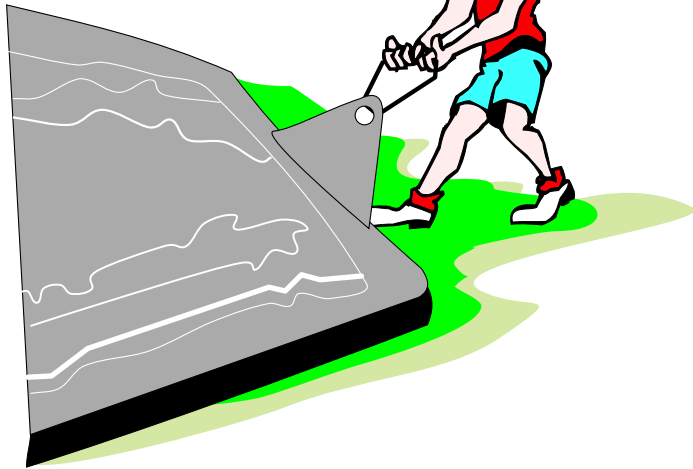


Tie all vents and air release stubs in the closed position, or close all zipper openings.



Slip the six foot tube in the rear of the INFLATABLE snugly around the blower outlet and secure it with the draw string.



Using only one 50 foot extension cord for each blower.

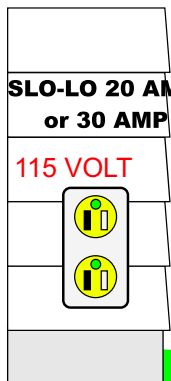

Plug each blower into a 115 volt electrical outlet. Make sure the outlet has either a SLO-BLO 20 AMP fuse or 30 AMP fuse circuit. The blower should be the only thing plugged into the circuit. If two blowers are required they must be on separate circuits.




Installation takes about 5 minutes. The blower runs continuously while the unit is in use. once inflated the unit can be repositioned, then anchored into its final position.



The INFLATABLE MUST BE ANCHORED

Hammer stakes into ground through the nylon loop at each corner of the unit. Sand bags may be provided if setup on a hard surface Stake should be within 12 inches from unit to prevent tripping.

To test the anchor pull up with a firm lifting force to assure that it is secure.

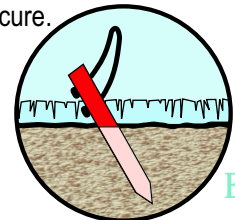

The Brush Works

Taking It Down

CAUTION: Do not jump on partially inflated unit.



CAUTION: Do not fold wet. Unit must be dry before taking down.



When unit is deflated, fold each side to center allowing one side to overlap the other.




Next, fold in half again to form single width.




Starting from the door, roll the unit toward the rear pushing any excess air from the INFLATABLE. It must be rolled very tight or it will not fit in the bag.



Place tie straps under the unit, tuck in the tubes and tie the bundles so it is secure.

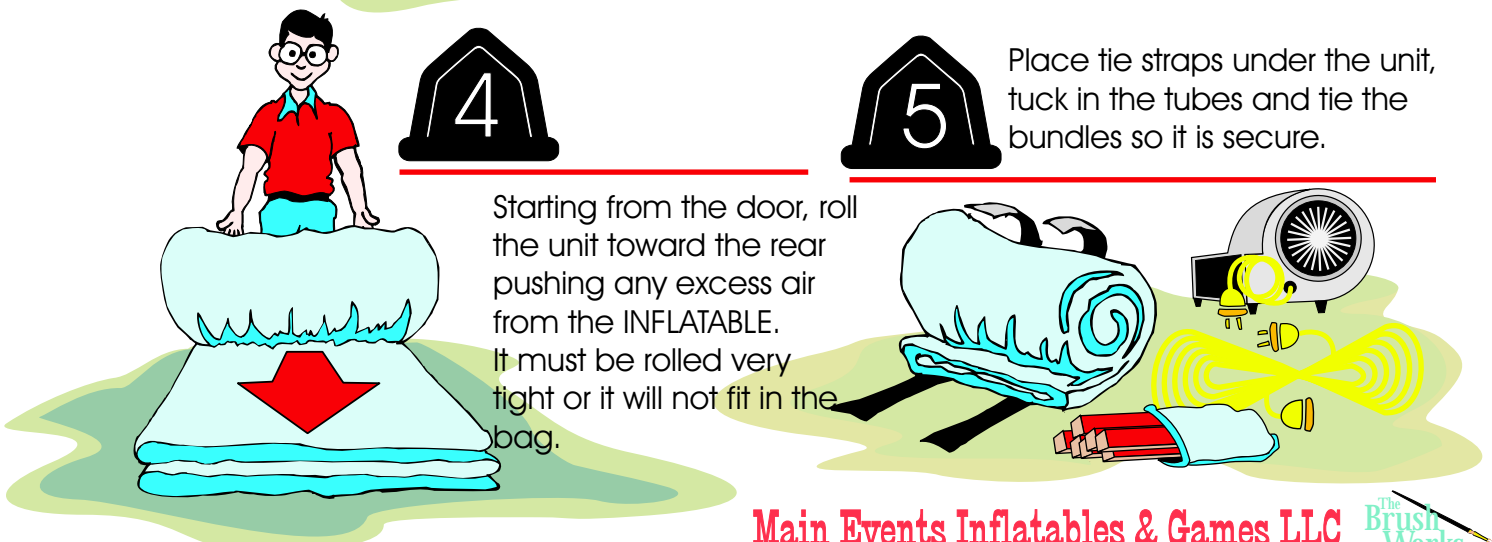

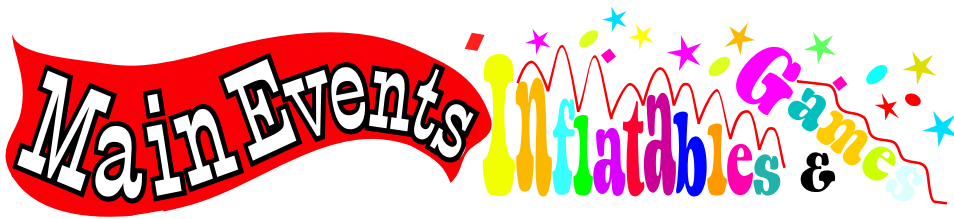

www.maineventsinfatablesandgames.com

Jump & Inflatable Planning Guide

Jump, Interactive, & Slide Planning Guide

- Turn off all sprinklers including under ground sprinklers.
- Know where underground gas, plumbing and water lines are on your property.
- Main Events will not be responsible for damage to pipes or plumbing of any kind.
- Adult supervision of all children is required at all times. This is very important!
- Jumps, Interactives, and Slides need an 120 volt electrical source, generators are available for an extra charge.
- Keep all unnecessary electric wires and cables away from Jumps, Interactives, and Slides.
- Plan a spot in a grassy area or hard, flat surface away from your house meters and pool.
- Be aware of the size of the Jump, Interactive, or Slide you are renting, add at least a foot or two all around and then plan where the Jump, Interactive, and Slide unit will go.
- Be sure there is overhead clearance too. Most units are 13 to 20 feet tall!
- Provide water for thirsty bouncers to drink outside of and away from the Jump, Interactive and Slides.
- Plan a food, drink and snack area a safe distance away from Air Jump, Interactive and Slides.
- Keep all party toys such as 'silly string' and other toys away from Jump, Interactive and Slides
- Keep all water sources away from Jumps, Interactives, & Slides.