



1015 Brice St. Newark, Ohio 43055  
Office 740-322-6355 Fax 740-322-6358

## Econo Floss Operating Instructions

There is a \$20.00 cleaning charge that will apply to each unit that is not clean upon return.

### ELECTRICAL REQUIREMENTS:

Econo Floss machine requires a 15 amp., 110 volt outlet

### HOW TO OPERATE:

- 1) Plug machine into outlet and place pan on top around head. DO NOT USE AN EXTENSION CORD!
- 2) Flip main power, motor and heat switch to the 'ON' position.
- 3) With motor running, fill floss head about 90% full with floss sugar.
- 4) Cotton candy will start appearing within about 30 seconds.
- 5) Cotton candy should feel dry like hair. If it is damp, turn the heat down. Also, if the machine begins to smoke, turn the heat down.
- 6) If the floss seems to be flying out of the pan, bend the leather strips on the head up.

### TO MAKE A CONE:

- 1) Hold the paper cone between thumb and two fingers, and break into the floss with the cone.
- 2) Let a little floss build up on the cone and then start to rotate the cone.
- 3) Roll the cone along the pan, rotating it towards the inside of the pan.
- 4) To bag the floss, use the cone or gloved hand, put two balls of the floss into the bag.
- 5) Seal the bag keeping as much air in the bag as possible to preserve the look of the floss. Remember: 2 colors in the bag sell better than one!

### CLEANING INSTRUCTIONS

Wash floss pan and wipe down the machine. DO NOT CLEAN THE FLOSS HEAD. Leave the left over sugar inside the machine for our experienced employees to remove.

**MAIN EVENTS PARTY RENTAL WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT.**

### For Office Use Only

CLEANED/TESTED BY: \_\_\_\_\_

DATE TESTED: \_\_\_\_\_

UNIT # \_\_\_\_\_

FLOSS PAN: \_\_\_\_\_ YES \_\_\_\_\_ NO

STABILIZER CLIPS: \_\_\_\_\_ YES \_\_\_\_\_ NO

MESH SCREEN: \_\_\_\_\_ YES \_\_\_\_\_ NO

SPINNER MOTOR: \_\_\_\_\_ YES \_\_\_\_\_ NO

BOX FOR SPINNER MOTOR: \_\_\_\_\_ YES \_\_\_\_\_ NO

*If you have questions with the operation of this equipment, we can be reached at 740-322-6355 during normal business hours,*

**THANK YOU FOR RENTING FROM  
MAIN EVENTS PARTY RENTAL.  
HAVE A TERRIFIC EVENT**