



 
1015 Brice St. Newark, Ohio 43055
Office 740-322-6355 Fax 740-322-6358

 
Installation Instructions for Pipe & Drape

Equipment Included:

- Base Plates
- Aluminum Uprights
- Adjustable Sliders
- Panels of Drape

Instructions for Set-Up

- I. Adjust Aluminum Drape Support.  to the desired length and lock into place. Lay the sliders on the floor in the area in which you will up the drape.
Note: Sliders will adjust between 7' and 12'.
- II. Place base plates down on each side of the adjustable sliders and insert aluminum uprights onto base plates as shown on diagram below.

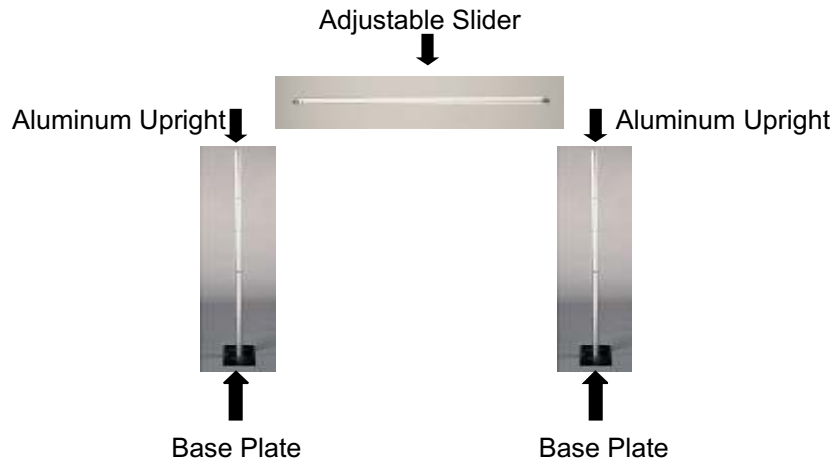

Note: Ensure that the slots on the aluminum uprights are at the top and not at the bottom, as this is where the adjustable sliders will hook into.

- III. Thread drape panels (seam side back) onto slider and hook slider onto aluminum. If you find that the aluminums are too high, hook only one side of slider holding it at a 45 degree angle when threading drape onto adjustable slider. Prior to installation, drape panels are 3' wide. Upon installation of the drape, please gather each drape panel to reflect a width of 2' of draping which gives the finished product a nicer look as it appears fuller from the gathers.

Instructions for Dismantling:

To remove drape, unhook one side of the adjustable slider from the aluminum upright, drop slider to a 45 degree angle to permit the drape to slide off of them. Detach slider from remaining side. Fold up drape panels and place into tubs provided, and adjust sliders back to their original position. Place all aluminum uprights, sliders and base plates back in the storage boxes provided



If you have questions with the operation of this equipment, we can be reached at 740-322-6355 during normal business hours,

**THANK YOU FOR RENTING FROM
MAIN EVENTS PARTY RENTAL.
HAVE A TERRIFIC EVENT**